

EARTHQUAKES AND STRUCTURES (EquakeStruct.exe)

Technical Manual

System Requirements

Microsoft® Windows® 7 64 bits

Intel® Pentium® 4 or AMD Athlon™ dual-core processor, 2.2 GHz or higher with SSE2 technology

2 GB RAM (4 GB recommended)

1 GB free disk space for installation

1,024 x 768 display resolution with true color (1,600 x 1,050 with true color recommended)

Installation

MATLAB Compiler

1. Pre-requisites for Deployment

. Verify the MATLAB Compiler Runtime (MCR) is installed and ensure you have installed version 7.16.

. If the MCR is not installed, run MCRInstaller, located in:

```
<matlabroot>*\toolbox\compiler\deploy\win64\MCRInstaller.exe
```

For more information about the MCR and the MCR Installer, see “Working With the MCR” in the MATLAB Compiler User’s Guide.

NOTE: You will need administrator rights to run MCRInstaller.

2. Run EquakeStruct.exe

Authors

Sérgio Oliveira & André Silvestre
Laboratório Nacional de Engenharia Civil
Portugal

Margarida Oliveira
Projeto Espiral (Fundação Calouste Gulbenkian) - Escola E.B. 2,3 Piscinas Lisboa
Centro de Matemática Universidade do Minho
Portugal

Suzana Nápoles
Departamento de Matemática, Faculdade de Ciências
Universidade de Lisboa
Portugal